

 


Yealink IP DECT Phone W52P

 
User Guide



Base Station

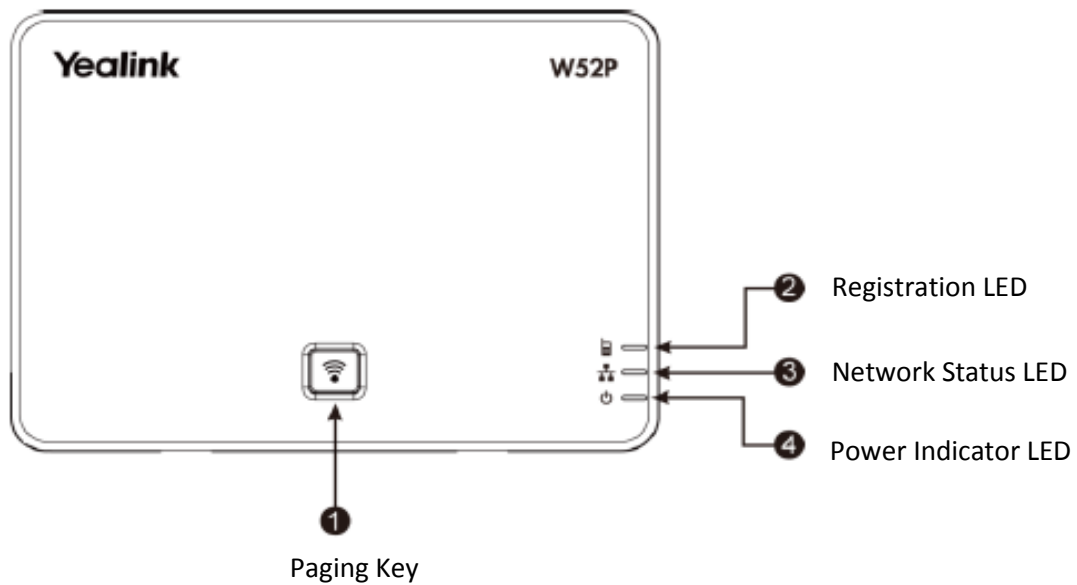



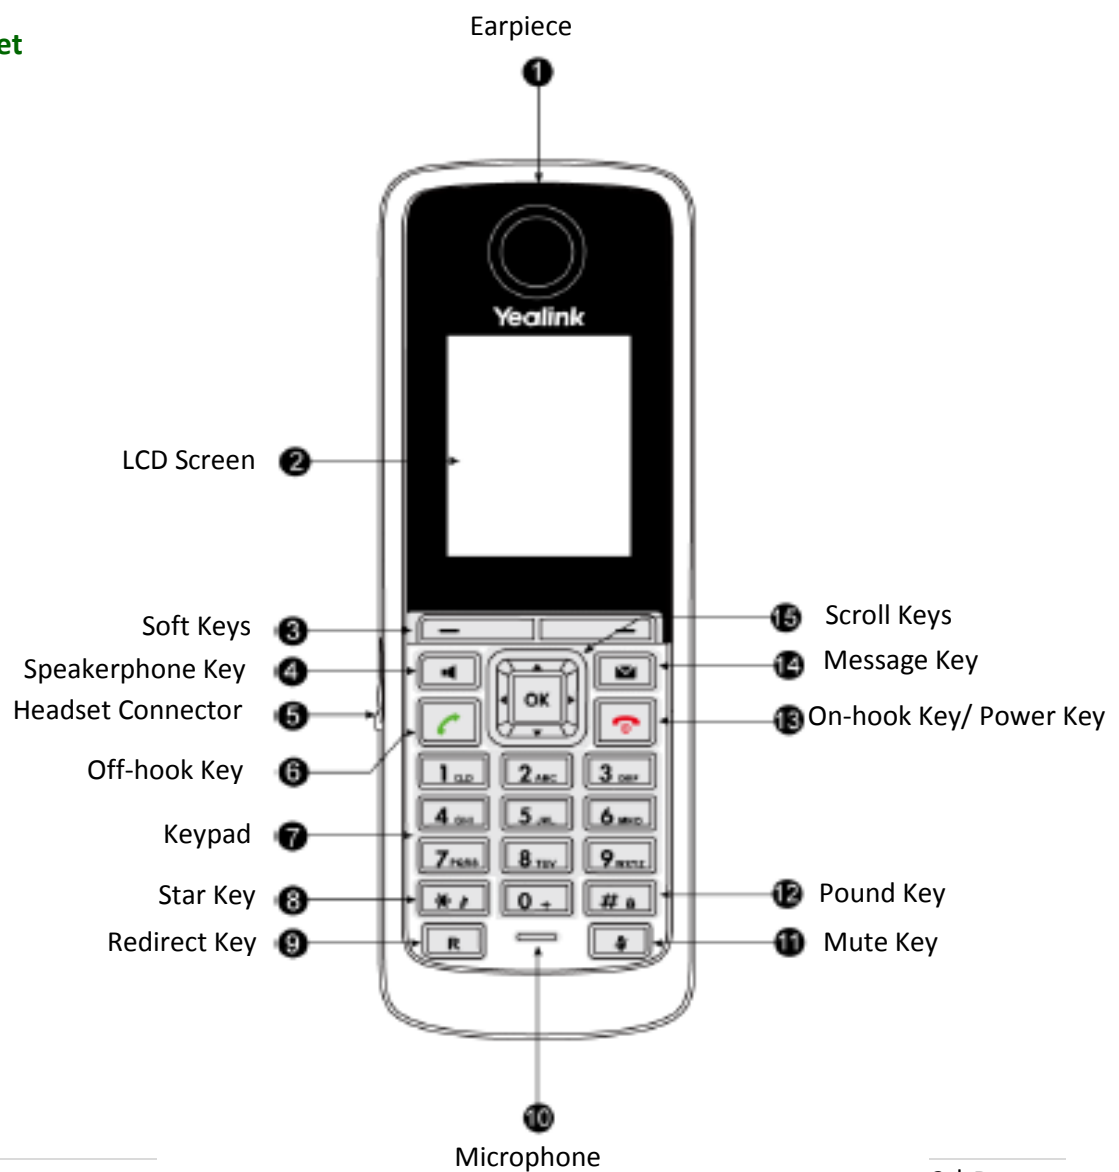











Handset



Introducing your Polycom IP DECT Phone

The Yealink W53P is a SIP Cordless Phone System designed for small business and SoHo who are looking for immediate cost savings but scalable SIP-based mobile communications system. Combining the benefits of wireless communications with rich business features of Voice over IP telephony, User can benefit from freedom of movement, lifelike voice communications, multi-tasking convenience, professional feature like intercom, transfer, call forward, 3 way conference, PoE etc

Quick Reference Guide

<u>Icon</u>	<u>Description</u>
	Anonymous Call
	Anonymous Call Rejection
	Missed Call
	Voice Mail
	Keypad Lock
	Silent Mode
	Do Not Disturb
	Call Forward
	Call Hold
	Call Mute
	Unassigned Outgoing Line
	Unusable Line
	Loudspeaker On
	Handset Mode On

Tips for using your Yealink IP DECT Phone

Placing a call

You can use your handset to place an internal or external call. You can place a call using the following call modes:







 
- Earpiece Mode – Pressing the off-hook key to dial out
- Speakerphone Mode – Pressing the speakerphone key to dial out
- Handset Mode – Connecting a headset

During the call, you can switch the call mode by pressing the corresponding keys or connecting a headset. You can cancel the dialing operation by pressing the on-hook key. During the call conversations, you can press the left and right navigation keys to adjust the volume of the currently used audio devices (earpiece, headset or loudspeaker). The call duration displays on the LCD screen while the call is in progress.

Placing Internal Calls

You can make free internal calls between the handsets registered to the same base station. You can place an internal call to one handset or all handsets registered to the same base station

To place an internal call to one handset




1. Press  to enter main menu
2. Select  - the LCD screen displays all other registered handsets names and the All HS option.
3. Press  or  to highlight the desired handset name.
4. Press , , or  to dial out.


All other handsets registered to this base station will ring simultaneously.

Placing External Calls

You can place external calls on the handset. External calls based on the public telephone network require the use of SIP lines. Your system administrator will assign the SIP line to the handset beforehand, so that after you register the handset to the base station, the handset is ready to use.



To place an external call:

1. Enter the desired number using the keypad.
2. Press , , or  to dial out.

If there are multiple lines assigned to your handset as outgoing lines, press the Line soft key to select the desired line and then press  or the Dial soft key to dial out. If you do not select a line, the handset uses the default outgoing line to dial out.

To place a new call during an active call:

You can have at most two calls on your handset.

1. Press the Ext.Call soft key.
2. The active call is placed on hold.
3. Enter the desired number in the Call To field using the keypad.
4. Press  or  to dial out.

Answering calls


You can answer a call in three ways:

- Using the earpiece
- Using the speakerphone
- Using the headset

Answering when not in another call

In all cases, the active call will appear on the LCD screens showing call duration and destination

To answer a call using the earpiece

1. Press  or the Accept soft key

To answer a call using the speakerphone mode

1. Press 

To answer a call using the headset

1. With a headset connected, press the Accept soft key.

Answering when in another call

If you are during an active call, an incoming call arrives on the handset, do the following

1. Press  ,  or the Accept soft key.

The incoming call is answered and the original call is placed on hold.

Call Mute

You can mute the microphone during an active call. When muting the microphone, you can hear the other party but he or she cannot hear you.

To mute a call:


1. Press  during an active call

The call is on mute and the  icon displays on the LCD screen.



Call on hold

You can place an active call on hold. At any time, at most one active call can be in progress on your handset. Another call can be answered and made while placing the original call on hold.

To place a call on hold:

1. Press the Options soft key during a call, and select Hold.
2. The call is placed on hold and the  icon displays on the LCD screen. To resume a hold call:

Do one of the following:

- Press the Resume soft key.
- Press .
- Press .

Voicemail

You can leave voice mails to someone else. You can also receive and listen to the voice mails. The voice mail feature ensures that you will never miss any important messages. When receiving a new voice mail, the voicemail icon appears on the LCD screen with the number of unread voice mails and the message key LED flashes red.

To leave a voice mail:

You can leave a voice mail to someone else when he or she is busy or inconvenient to answer the call. Follow the voice prompts from the system server to leave a voice mail, and then hang up after completing.

Conference Call

You can use the handset to create a local conference with other parties. The handset supports up to 3 parties in a conference call. You can create a conference between an active call and a held call on the handset.

To set up a local conference call

1. Place a call to the first party
2. Press options soft key, and select conference
3. Do one of the following

Enter the number of the second party or select the handset you want to add to the conference.

4. Press the Conf. soft key to dial out.
5. Press the Directory soft key, and select the desired contact.
6. Press the Call soft key.

If both the office number and the mobile number of the contact are stored, select the desired number and press the OK soft key to dial out.

7. When the second party answers the call, you can consult with him or her before adding to the conference.
8. Press the Conf. soft key again to join all parties in the conference.

To join two calls in a conference:

1. Place two calls on the handset.
2. Select the desired call and make sure the call is active.
3. Press the Options soft key, and select Conference.
Two calls are joined in the conference
To drop the conference call, press the End soft key

Star Codes

Automatic Call Back Deactivation	#8
Call Forwarding Always To Voice Mail Activation	*21
Call Forwarding Always To Voice Mail Deactivation	#21
Call Forwarding Busy To Voice Mail Activation	*40
Call Forwarding Busy To Voice Mail Deactivation	#40
Call Forwarding No Answer Activation	*92
Call Forwarding No Answer Deactivation	*93
Call Forwarding No Answer To Voice Mail Activation	*41
Call Forwarding No Answer To Voice Mail Deactivation	#41
Call Forwarding Not Reachable Activation	*94
Call Forwarding Not Reachable Deactivation	*95
Calling Line ID Delivery Blocking per Call	*67
Calling Line ID Delivery per Call	*65
Call Return	*69
Call Waiting Persistent Activation	*43
Call Waiting Persistent Deactivation	#43
Cancel Call Waiting	*70
Clear Voice Message Waiting Indicator	*99
Customer Originated Trace	*57
Directed Call Pickup	*97
Directed Call Pickup with Barge-in	*33
Direct Voice Mail Transfer	*55

Last Number Redial	*66
Per Call Account Code	*71
Push to Talk	*50
Speed Dial 100	*75
Speed Dial 8	*74

Operating Instructions

Notice	<ol style="list-style-type: none"> 1. If the WAN (wide area network) connection fails to a site for any reason, including a fault on the circuit or a power cut, then the ability to make and receive calls from the IP phones utilising that WAN circuit will be restricted. These failures may be caused for reasons outside our control. Other services will be fully maintained including voice mail and the ability to divert calls to other numbers including mobiles. If another working WAN circuit is available at that site then this can be used to fully restore service to all phones. 2. This service allows for calls to 999 and 112, however these services will be affected if there is a power cut or your WAN circuit fails 3. With regard 999 services no location information is passed to the emergency services operator this will mean that you will have to state the address that you wish the emergency service to attend. 4. We do not offer a paper based telephone directory service 5. If you require a PDF that allows you to print off stickers to attach to the phone device explaining the above please contact us.
---------------	---